



# AEC Premier Straw® Wattles

Straw Sediment Control Device

## Installation

AEC Premier Straw Wattles shall be installed on slopes or in channels to intercept water flow and collect sediment on site. AEC Premier Straw Wattles are typically installed in a two inch deep trench that is constructed along the contour, perpendicular to the slope or direction of flow. Ends of the wattles shall be turned up the slope, so as to retain water and prevent its release from the end of the wattle.

Wattles shall be secured to the subgrade by wooden stakes spaced every four lineal feet across the length of the wattle. Stakes shall be driven through the center of the wattle and into the ground a minimum of 24in, with less than two inches projecting above the top of the wattle. A stake shall be placed within two feet of the end of the wattle. The installation process may be expedited by using a metal rod to create pilot holes for wooden stakes. When joining two wattles, tightly abut both ends or overlap the wattles approximately six inches. If wattles are joined together by abutting the ends, tie the ends together using heavy twine or plastic locking ties.




When installing in a channel bottom, AEC Premier Straw Wattle installation shall continue three feet above the anticipated high water mark.

AEC Premier Straw Wattles shall remain in place until fully established vegetation and root systems are present and can survive on their own. Wattles that are not removed will degrade in-place.


Project specifications should be reviewed for any unique installation requirements.




## AEC PREMIER STRAW® WATTLES Staking Pattern Guide

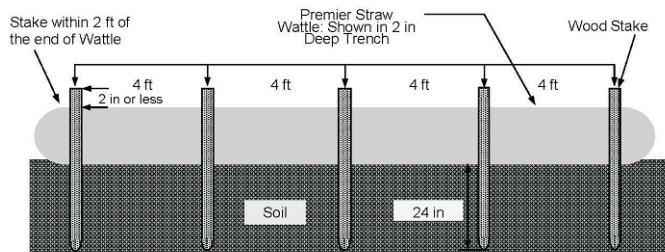

### Wattle Cross Section: On Bare Soil

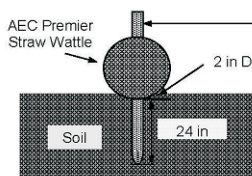

### Wattle Cross Section: On Erosion Control Blanket

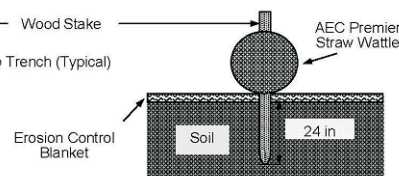

#### Notes:

1. Drawings are not to scale.
2. Ends of Wattles shall be turned slightly up slope.
3. Recommended stakes are wooden 1 1/8 in wide x 1 1/8 in thick by a minimum of 30 in long for 9 in and 12 in AEC Premier Straw Wattles and 48 in long for 20 in AEC Premier Straw Wattle. Stakes shall not extend above the straw wattle more than 2 in.

Disclaimer: AEC Premier Straw Wattles are a system for erosion and sediment control on slopes and channels. American Excelsior Company (AEC) believes that the information contained herein to be reliable and accurate for use in erosion and sediment control applications. However, since physical conditions vary from job site to job site and even within a given job site, AEC makes no performance guarantees and assumes no obligation or liability for the reliability or accuracy of information contained herein for the results, safety, or suitability of using AEC Premier Straw Wattles, or for damages occurring in connection with the installation of any erosion control product whether or not made by AEC or its affiliates, except as separately and specifically made in writing. These specifications are subject to change without notice.

Distributed by:

**Colonial**  
Construction Materials

800-436-6287 www.colonial-materials.com

Form#025/041015E

